


2021 to 2024

Q10022411 - How to enable NVMe mode to use NVM in-box driver?

In the controller System Controls page, the System Configuration menu, there has a feature called 'Host Interface Mode'. Set this option to "NVMe Mode".

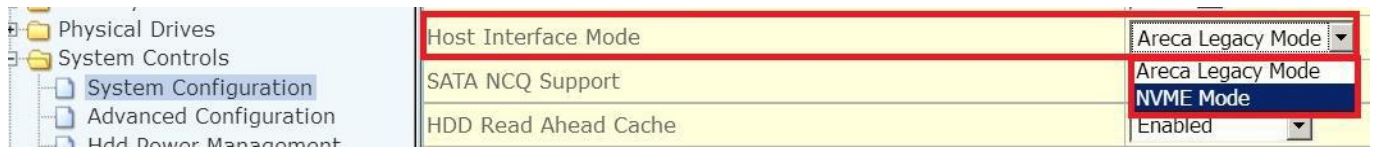

Note: Motherboard should set to "UEFI Boot" or "Dual Boot" in NVMe Mode so you can get to the McBIOS setup utility through "UEFI Areca OS" from the Boot List.

Unique solution ID: #2055

Author: Simone

Last update: 2025-01-06 11:50