

2021 to 2024

Q10072102 - ASRock J5040-ITX is UEFI-Only (no CSM). How can RAID adapter configure the RAID 1 without "Press F6" option during boot with the J5040-ITX.

McBIOS manager can be launched using UEFI Shell.

Please refer the faq [Q10062102](#) - How to create a bootable USB drive to access the default UEFI shell to launch the McBIOS RAID manager?

Unique solution ID: #1951

Author: Simone

Last update: 2021-02-25 09:39