

2018 to 2020

**Q10051211 - Customer reconfigures as R5+spare.
But system would not start to initialize it.**

Controller starts rebuilding/migrating in two conditions

1. Stay in controller bios manager or
2. Boot into os and the controller driver loaded.

Unique solution ID: #1361

Author: Simone

Last update: 2022-01-06 08:31