

2018 to 2020

Q10021106 - I am trying to expand a volume on ARC-1220. I added a disk to the raid set. The raid set now says degraded and IDE channel shows fail.

The array status must be normal to be able to expand it, so you have to rebuild the array first. Please replace it and assign the new drive as hotspare for rebuilding, after rebuilding completed, you will be able to expand raidset or volume.

Unique solution ID: #1389

Author: Simone

Last update: 2015-08-25 04:06