

2018 to 2020

Q10021508 - RAID controller just shows “need init”, and not starting the initialization.

Controllers start background tasks under two conditions only.

1. Stay in raid card bios console.
2. Boot into OS and raid card driver is loaded.

Initialization, rebuilding and migration are all background tasks.

Unique solution ID: #1486

Author: Simone

Last update: 2015-08-24 08:41