

**2018 to 2020**

**Q10031807 - ARC-1883LP card shows external expander before internal. Is it possible to change expander priority?**

Areca RAID controller firmware assigns the order of enclosures based on the priority of their responses. You can power on the external enclosure later to make sure the internal enclosure been ordered in first place.

Unique solution ID: #1751

Author: Simone

Last update: 2022-01-06 07:41