

**2015 to 2017**

**Q10051108 - I tried to build a raidset over  
4xHUA723020ALA640 in the controller  
bios I saw a new option called "raid set mode". I  
was able to set "128  
volumes" or "16 volumes". What is this option  
about?**

128 volumes mode is the default mode for SAS controller and the 16 volumes mode is

used for support roaming this raidset to SATA controllers. Since SATA controllers support upto 16 volumes only, you have to use 16 volumes mode if you plan to roaming this raidset between SAS controller and SATA controller.

Unique solution ID: #1421

Author: Simone

Last update: 2015-08-25 04:12