

2015 to 2017

Q10011607 - The ARC-1883ix expander gets mapping errors using show logs command when connect JBOD.

ARC-1883IX external port is set as **Drive** as default. The message is OK without any operation problem, if connect a JBOD. To eliminate this message, just declare this port (CLI>con cable c0) is for cable not for drive.

Unique solution ID: #1613

Author: Simone

Last update: 2022-01-06 08:11