

**Q10070902- I have ARC-1231 controller. Can you please explain the difference between using disks in JBOD mode and using disks in pass-through mode. I have a feeling that the controller uses it's onboard cache when in pass-through mode. Is this the case?**

The only difference is in JBOD mode, controller configures all drives as pass-through disk and in RAID mode, you have to configure pass-through disk by yourself in RAID mode. In other words, you can use raid with pass-through disks at same time in RAID mode but JBOD mode not.

Unique solution ID: #1518

Author: Simone

Last update: 2022-01-06 07:57