

Q10070903- When my ARC-1680ix-24 is installed in my Intel DG45ID system, the system does not display anything during boot. I can access the 1680 via the integrated Ethernet port, but the rest of the system is unusable. As soon as the 1680 is removed, the system operates and displays normally.

Please update the bootcode file ARC1680boot.bin to date:2009-3-12 through the integrated Ethernet port. It can solve your Intel DG45ID with Intel IOP348 RAID adapter compatible issue.

Unique solution ID: #1527

Author: Simone

Last update: 2022-01-06 07:58