

Q10011811 - My degraded RAID set immediately claimed the inserted fully working HFS+ drive as a hot spare and all data now lost. Have you a fix for this problem?

In our design, we think that controller recovers a degraded volume at the first priority, so the default setting will automatically rebuild a degraded volume if new drive inserted. Please login the controller manager console, and configure the 'Hot Plugged Disk for Rebuild' to disable.

Unique solution ID: #1766

Author: Simone

Last update: 2022-01-06 07:51