

Q40011603 - What is the max CPU Temperature of the ARC-5066 or at which temperature it starts to log and throttle?

The max CPU Temperature of ARC-5066 is 125 °C. Controller firmware will alarm for over temperature when the processor temperature is over 95 °C.

Unique solution ID: #1597

Author: Simone

Last update: 2021-02-04 10:26