

Q50021907 - How to identify the cable is active or not?

Use the AOC cable plug ARC8028 and ARC8026. From ARC8028 CLI prompt, issue the following commands

CLI>**cable**

Current Cable management: Off

CLI>**cable on** ;;turn cable management on

New Cable management: On

CLI>**st**

All Of The User Configurations are Saved.

CLI>**reset**

Unique solution ID: #1831

Author: Simone

Last update: 2021-02-04 10:41