

2012 to 2013

Q10031307 - Using the “Set Disk To Be Failed” to kill out the disk, it can show normal status on other RAID adapters.

“[Set Disk To Be Failed](#)” function will keep the status on the flash ROM not disk.

Roam to others controller will keep as a normal disk.

Unique solution ID: #1265

Author: Simone

Last update: 2015-08-24 10:33