

## 2012 to 2013

**Q10070903- When my ARC-1680ix-24 is installed in my Intel DG45ID system, the system does not display anything during boot. I can access the 1680 via the integrated Ethernet port, but the rest of the system is unusable. As soon as the 1680 is removed, the system operates and displays normally.**

Please update the bootcode file ARC1680boot.bin to date:2009-3-12 through the integrated Ethernet port. It can solve your Intel DG45ID with Intel IOP348 RAID adapter compatible issue.

Unique solution ID: #1527

Author: Simone

Last update: 2022-01-06 07:58