

**2016 to 2020**

## **Q50021508 - Is there a way to set it not to light up Red LED for empty slot on ARC-8018 expander?**

You can set it using the CLI command.

CLI> sys -y [on | off]

Unique solution ID: #1397

Author: Simone

Last update: 2015-08-24 06:25