

Q60011203 - When ARC-5040 configure USB 3.0 and connect to computer, the access LED will be blinking by itself and it won't stop.

It has been fixed by the firmware date: 2012-03-05 or later.

Unique solution ID: #1372

Author: Simone

Last update: 2015-08-24 06:16