

Q10031805 - ARC-1883LP is booting without any problem in lagacy mode. But if I try to configure it in UEFI mode the system doesn't start any more.

The supported partition table for both legancy and UEFI mode is different. If your OS can boot up under Legacy mode, it will not boot up under UEFI mode.

Unique solution ID: #1746

Author: Simone

Last update: 2022-01-06 07:40