

Q10031910 - I have started to use the areca RAID adapter build in Ethernet port. I can log in to telnet and http. How do I restrict access to the telnet port or SMTP?

To disable the telnet port or http port, just configure it as port 0. If you didn't configure the SMTP IP setting, it will be not used.

Unique solution ID: #1800

Author: Simone

Last update: 2020-08-25 10:46