

**2012**

**Q10051211 - Customer reconfigures as R5+spare.  
But system would not start to initialize it.**

Controller starts rebuilding/migrating in two conditions

1. Stay in controller bios manager or
2. Boot into os and the controller driver loaded.

Unique solution ID: #1361

Author: Simone

Last update: 2015-08-24 11:41