

**2014**

## **Q10051410 - How to set the CLI instant volume check function 'scrub bad block' and 'recompute parity' option. It is possible via WebGUI.**

Cli does not support the option setting. Both 'scrub bad block' and 'recompute parity' are enabled via an instant volume check.

Unique solution ID: #1149

Author: Simone

Last update: 2015-08-24 09:36