

**2020**

## **Q10091903 - Is there any example to tell what look the alert would be when SMART errors occurred?**

Each drive manufacturer defines a set of SMART attributes, and sets threshold values beyond which attributes should not pass under normal operation. SMART values typically start at a high number and are decremented. When the parameter value is equal to or less than the threshold for that parameter an error condition is declared.

Unique solution ID: #1817

Author: Simone

Last update: 2019-03-20 11:08