

2021 to 2025

Q10062208 - ARC-1203-2I is not getting RAID configuration utility on screen. Instead of getting Shell screen message on screen.

Shell screen message as below means M/B BIOS has included the UEFI Interactive Shell for ARC-1203-2I UEFI BIOS to launch the McBIOS RAID configuration utility.

```
UEFI Interactive Shell v2.2
EDK II
UEFI v2.60 (American Megatrends, 0x0005000D)
Mapping table
Press ESC in 5 seconds to skip startup.nsh or any other key to continue.
Shell>
```

Make sure the RAID adapter “BIOS Selection” option in System Controls: Advance Configuration: BIOS Option=Auto or UEFI. Follow below steps to launch the McBIOS RAID configuration utility.

1. At the prompt type: ‘drivers’ and press **Enter**, located under the Device mapping table.

```
UEFI Interactive Shell v2.2
EDK II
UEFI v2.60 (American Megatrends, 0x0005000D)
Mapping table
Press ESC in 5 seconds to skip startup.nsh or any other key to continue.
Shell> drivers_
```

2. At the prompt type: ‘drvcfg’ and press **Enter**, driver configuration under the UEFI shell screen.

2021 to 2025


```
7-408A-AACC-731CFB7F1DD7)
132 00000010 ? - - - - AMI PS/2 Driver FvFile(5FECEF6B-5FA
4-4570-8163-0CF72A9C04C5)
133 0000000A ? - - - - HttpDxe FvFile(2366C20F-E15
A-11E3-8BF1-E4115B28BC50)
134 0000000A ? - - - - HttpDxe FvFile(2366C20F-E15
A-11E3-8BF1-E4115B28BC50)
135 00000000 ? - - - - DNS Network Service Driver FvFile(B219E140-DF
C-11E3-B956-0022681E6906)
136 00000000 ? - - - - DNS Network Service Driver FvFile(B219E140-DF
C-11E3-B956-0022681E6906)
13A 0000000A D - - 1 - FAT File System Driver FvFile(961578FE-B6B
7-44C3-AF35-6BC705CD2B1F)
13C 00000001 ? - - - - <null string> FvFile(2F2295B6-1BB
6-4CB7-BB9E-15C2C3424277)
13D 00000001 ? - - - - <null string> FvFile(2F2295B6-1BB
6-4CB7-BB9E-15C2C3424277)
1A8 00000010 ? - - - - AMI CSM Block I/O Driver FvFile(25ACF158-DD6
1-4E64-9A49-55851E9A26C7)
1A9 00000024 B - - 1 1 BIOS[INT10] Video Driver FvFile(29CF55F8-B67
5-4F5D-8F2F-B87A3ECFD063)
1AA 00000010 ? - - - - <null string>
26A 00000010 D X X 1 - Areca RAID Ctlr v2.06 <2021/01/05> Offset(0xA034,0xDBF
F)
Shell> drvcfg_
```

```
Shell> drvcfg
Handle [104] HII Config Access
Handle [193] HII Config Access
Handle [280] HII Config Access
Handle [284] HII Config Access
Driver [26A] Ctrl [24F] Lang [eng] Driver Configuration
Shell> _
```

3. At the prompt type: `drvcfg -s 26a 24f` and press **Enter**, areca McBIOS configuration under the UEFI shell screen

2021 to 2025

```
Shell> drvcfg
Handle[104]                HII Config Access
Handle[193]                HII Config Access
Handle[280]                HII Config Access
Handle[284]                HII Config Access
Driver[26A]  Ctrl[24F]  Lang[eng]  Driver Configuration
Shell> drvcfg -s 26a 24f_
```

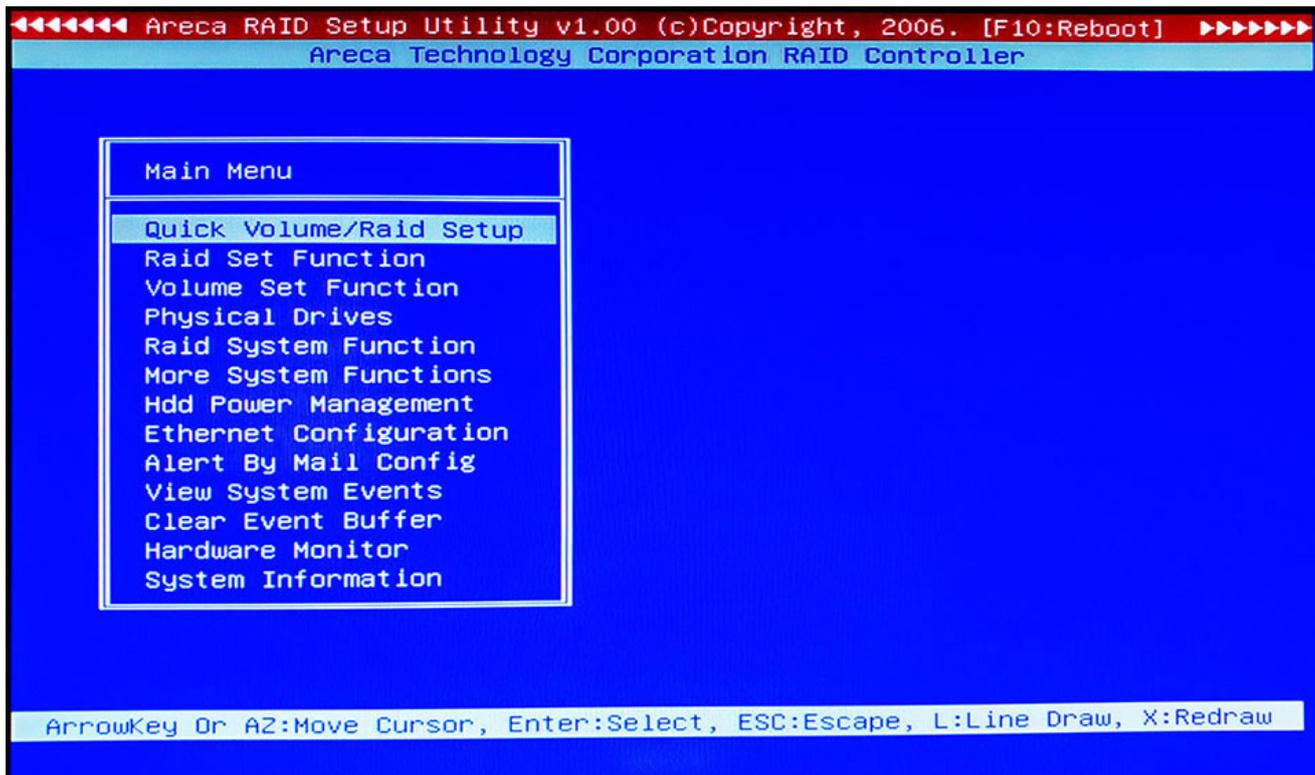

Unique solution ID: #2003
Author: Simone
Last update: 2022-08-15 09:14